

**RELAY VALVES**



# BRAKE

## RELAY VALVES




TOP CONTROL 1 DELIVERY  
45184-90000  
NISSAN



TOP CONTROL 1 DELIVERY  
45184-90011  
NISSAN

SIDE CONTROL  
1 DELIVERY PORT  
44540-1380  
HINO

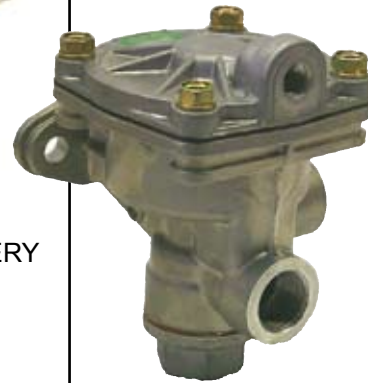


TOP CONTROL  
2 DELIVERY PORTS  
44540-1030  
HINO



2 CONTROL 2 DELIVERY  
45184-90010  
NISSAN

WABCO  
973 002 521 0

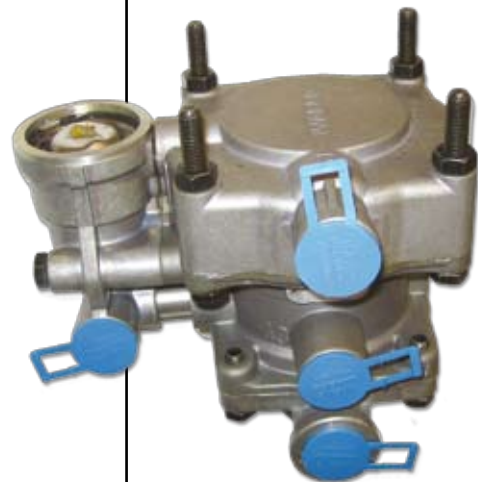

When installing fittings into valves, do not over-tighten or the valve housing may crack. Use thread tape or any thread sealant sparingly, to avoid this getting into the valves causing failure. This is also important when replacing fittings taking care to remove any old sealant before installing the new fitting. Blow the line through while they are disconnected, with clean compressed air. Dirt is the greatest cause of premature air valve failure.

