


## SPRING BRAKE VALVE



Air leaking from a Spring Brake Valve exhaust port does not necessarily mean that the valve is at fault. Air leaking from a Spring Brake to the service brake side, will travel back up the service line and exhaust out the next valve back. Before replacing a valve because of air leaking from the exhaust check the valves delivery lines, to see if they are the source.

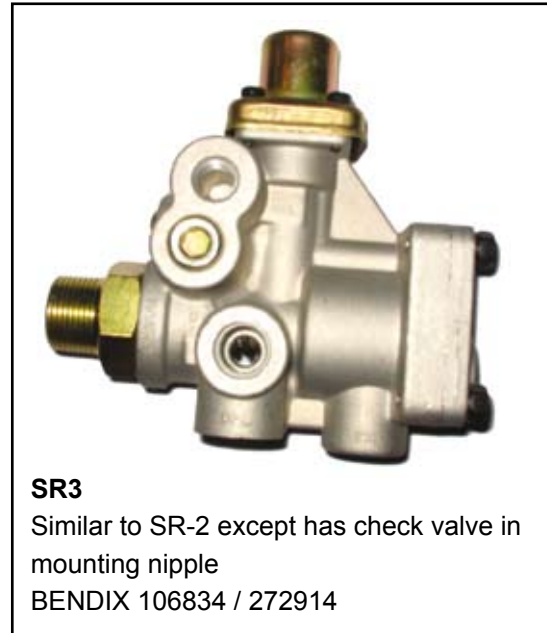