

TRACTIONAIR TYRE PLUMBING & PUNCTURE REPAIR



Isolate the TractionAir CTI system before changing tyres or removing wheels.

1. Turn off the isolating tap at the external feed hose supply tee block. (One each side)
2. Turn off both wheel end ball valves as shown above.
3. Undo with a spanner the hex head orange feed hose tail and remove from rotary coupling. NB All fittings at the CTI axle bridge are SAE ball seat type hex head.
4. Undo the tyre valve end of the black wheel hose, to allow removal of the wheel.
5. The wheel can now be removed in the normal manner. (Taking care not to damage the CTI axle bridge)

Reassembly

1. Make sure all hose are reconnected before turning the taps on.
2. The tyre valve hose tail is hand tightened only. Take care not to lose the internal rubber washer (convex side to tyre valve stem)
3. Once everything is reconnected and taps are turned on check for leaks.

