 




Spring Brake Valve

 
Spring Brake Valve

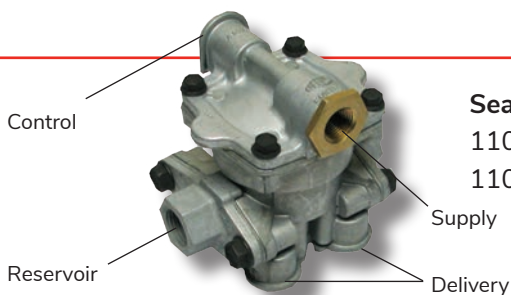

Sealco

110170
110270


All parts 3/8" NPT except reservoir 1/2" NPT
High Temperature version of 110170

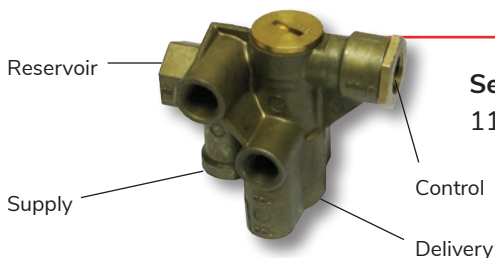

Sealco

110701

 Supersedes 110903
All parts 3/8" NPT except reservoir 1/2" NPT

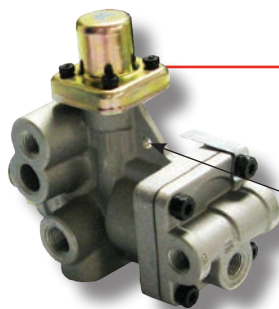


SR5 Pacific

ABC109539 Reservoir mount 3/4" NPT
Delivery 3/8" NPT other ports 1/4" NPT



SR3 Pacific

 
ABC106834 Reservoir mount 3/4" NPT
Delivery 3/8" NPT
Other ports 1/4" NPT
Has check valve in mounting nipple

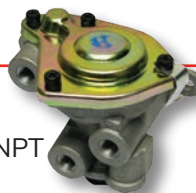

SR1 Bendix

286364 Ports 1/4" NPT
Reservoir Trip 55psi

 SR2 106835/272912 (same as SR3 valve but without check valve)

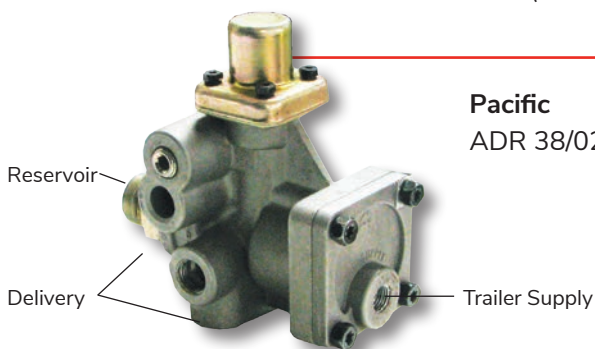

Pacific

ADR 38/02 Reservoir mount 3/4" NPT
Delivery 3/8" NPT
Other ports 1/4" NPT

Tip

Air leaking from a Spring Brake Valve exhaust port does not necessarily mean that the valve is at fault. Air leaking from a Spring Brake to the service brake side, will travel back up the service line and exhaust out the next valve back. Before replacing a valve because of air leaking from the exhaust, check the valves delivery lines to see if they are the source.

...for the long haul