

MADE POSSIBLE

STEEL RIMS

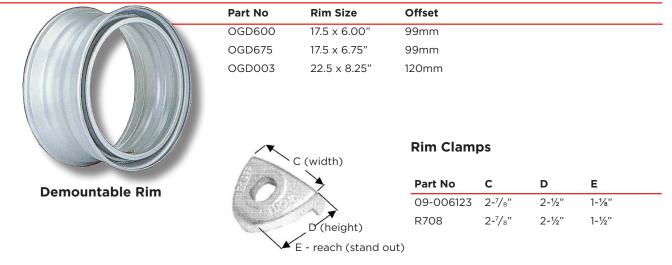


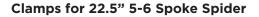



Part No	С	D	E
3314	7-¾"	1- ¹³ / ₁₆ "	1-1⁄4"
3319	7-¾"	1- ¹³ / ₁₆ "	1-5⁄8"

For 15-17.5" Webb 3 Spoke Spider

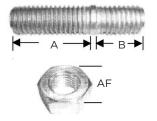

Thread ⁵ ‰" 11TP	2		Thread ¾" 11TP	I	
Stud AM5261	А	2-¾"	Stud AM5259	А	1- ¹⁵ / ₁₆ "
Overall 2-¾"	В"	7/8"	Overall 3-1/8"	B"	1"
Nut AM5262	AF	1- ¹ / ₁₆ "	Nut AM5260	AF	1-1⁄4"

Stud and Nut

TIPS

Tightening Sequence 6 8 & 10 Hole

Correct Tightening is Important. Incorrect tightening technique is dangerous and can lead to stud and/or wheel failure. Tighten gradually and evenly following a sequence as set out by the manufacturer or as shown at left.

DO NOT USE IMPACT OR RATTLE GUN (unless fitted with preset torque cut out).

