


BALL RACE

BALL RACE

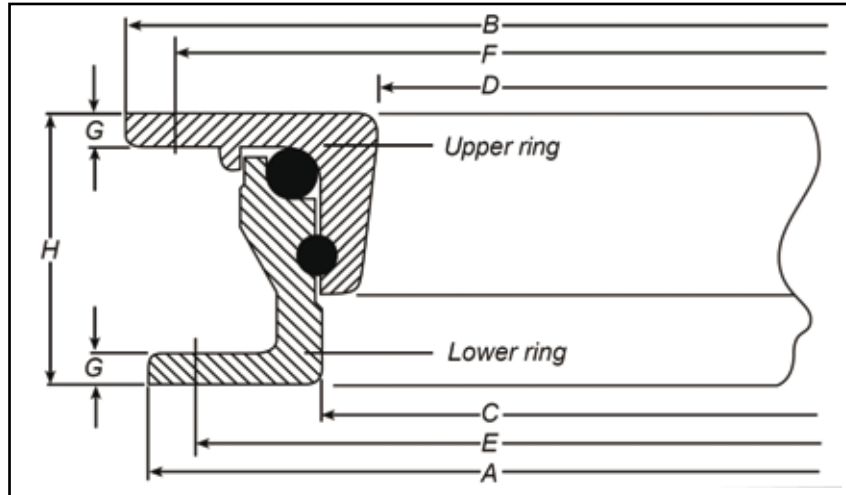

| Models | A (mm) | B (mm) | C (mm) | D (mm) | E (mm) | F (mm) | G (mm) | H (mm) | Weight approx. (kg) | Axial Load (kN) |
|----------|--------|--------|--------|--------|--------|--------|--------|--------|---------------------|-----------------|
| DK 80/16 | 880 | 894 | 784 | 749,5 | 852 | 866 | 9 | 80 | 49 | 16000 |
| DK 90/13 | 1095 | 1108 | 979 | 942 | 1060 | 1074 | 10 | 90 | 82 | 13000 |
| DK 90/14 | 987 | 1000 | 871 | 834,0 | 952 | 966 | 10 | 90 | 72 | 14000 |
| DK 90/20 | 1095 | 1108 | 979 | 942 | 1060 | 1074 | 10 | 90 | 82 | 20000 |


BPW turntables are supplied only lightly lubricated. Before initial operation the turntable should be lubricated with grease. (BPW recommend ECO-Li 91 lithium complex grease).

BPW turntables should be lubricated every 25,000 km (least every 3 months or 2-3 weeks of extreme conditions).

Check bolts at regular interval for tightness and re-torque if necessary.

Do not weld the turntable.

If welding on the vehicle ensure that the turntable does not carry any current load (this can cause damage to both balls and truck).

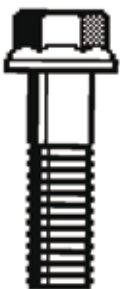

Fix your Ballrace or Fifth Wheel with Flange Head grade 8 Chassis Bolts and Nuts available in 1/2", 5/8" and 3/4" SAE thread lengths to suit.

E.G
IH414078CI 5/8" UNF x 2" Flange Head Bolt
IH414089CI 5/8" UNF Flange Nut

